



The Ultimate Cleaning Solution

FREEPHONE: 0800 833 087

<http://www.janitorialdirect.co.uk/>

Installation and Maintenance of your Baby Change Unit

Installation

General

The baby changing unit can support a load of more than 250lbs (115kg), however it is intended for use with a child of no more than 50lbs (23kg).

The wall and attachment method should be sturdy enough to support the rated load.

The manufacturer and distributors of this Baby Changing Unit will not be responsible for units that have been improperly installed.

Prior to installation

Inspect the box for transportation damage.

Verify that all parts are included. The package should contain:

- 1 Baby Changing Station
- 1 Hardware bag, containing:
 - 4 x hole plugs, 1-1/2" (38mm) diameter
 - 4 x machine screws, 1/4-20 x 2-1/2"
 - 4 x wood screws 1/4" x 3"
 - 4 x washers
 - 4 TOGGLER toggle bolts

Locate the Baby changing station in an area where it will not obstruct traffic.

Allow sufficient space in front of the unit to provide appropriate access.

Use this sheet as a template to mark the four mounting points. For a table height of 32-34 inches (81-86cm) the lower mounts should be between 37 and 39 inches (94-99cm) above finished floor. Use a level to ensure that the mounting is horizontal.

Mounting on Hollow Walls

Important: Unit mounting must be adequately reinforced to carry rated load. At least 2 mounting points on the same side must fall on a wood or metal stud.

Use a stud finder to locate studs if necessary

Wood studs

Drill 1/8" (3mm) diameter holes into the wood at the four mounting points. If only two holes fall on a stud, drill two 1/2" (13mm) diameter holes into the hollow wall at the non-stud side and install the toggle bolts as described above.

Install the unit with the self-tapping screws (or machine screws with toggle bolts) and washers provided. **DO NOT TIGHTEN**

Metal studs

Drill ½” (13mm) diameter holes at the four mounting points. Make sure at least two holes on the same side penetrate a metal stud. Install the toggle bolts as described above. Install the unit with the machine screws and washers provided. **DO NOT TIGHTEN.** Use a level to ensure that the bed table is horizontal and tighten the four screws securely.

NOTE: When mounting the unit over ceramic tile you will need to drill clearance holes, through the tile only, with a masonry bit. Use a 5/16” (8mm) bit to clear wood screws or a ½” (13mm) bit for toggle anchors.

Mounting on Masonry Walls

Installation on a masonry wall requires four ¼” x 1” (6mm x 25mm) expansion anchors and four ¼” x 1-1/4” (6mm x 30mm) lag bolts, which must be purchased separately at a hardware or building supply store.

Drill the correct diameter holes (usually indicated on the expansion anchor) 1-1/8” (29mm) deep minimum at the four mounting points.
Insert the four expansion anchors and tap flush to the wall with a hammer.
Install the unit with four lag bolts and the washers provided. **DO NOT TIGHTEN.**
Use a level to ensure that the bed table is horizontal and tighten the four lag bolts securely with a socket wrench.

Testing & Final Assembly

Open and close the unit several times to check for smooth operation.
Place a weight of approximately 70lbs (32kg) on the bed table and check that unit remains securely fastened and that there is no movement away from the wall.
Install the four hole plugs over the mounting screws using firm pressure.
If the installation instructions have been followed correctly the baby Changing unit is now safe and ready for use.

Maintenance

General

Ensure that the liner compartment is always adequately stocked. Liners are essential to provide a barrier between the baby and the bed of the unit, and to help protect against the spread of infection.
Thoroughly clean the unit daily with warm water and mild anti-bacterial detergent, rinse with clean water and dry. Do not use any abrasive cleaning agents.
Periodically inspect the unit to ensure that it remains securely attached to the wall, and that the integrity of the unit and the wall mounting has not been affected by vandalism or abnormal wear.

Opening the liner compartment

The compartment door is hinged at the bottom and retained by a concealed catch at the top.
Place your hand inside the liner opening
Apply firm pressure away from the wall near the centre of the door.

As the cover flexes, the catch will release and the cover will pivot forward.

Bed Liner replacement

The baby Changing unit is designed to dispense multi-fold towels as well as two sizes of plasticized bed liners. When inserting the multi-fold towels, place the stack so that the bottom-most fold faces the wall. When dispensing narrow bed liners, raise the retaining wire in the compartment and slide the liners underneath.